

Instructions for Replacement

1 1/2" & 2" Mixing Valve


Valve Insert Replacement Instructions

Note: Mixing valve shown with mounted to the *right* of the boiler.


Ensure the mixing valve has been isolated from the system before proceeding.

1) If there is a mixing valve motor, disconnect the neutral wire from the controller.


2) Turn the mixing valve handle or mixing valve motor knob so that the mixing valve is closed.

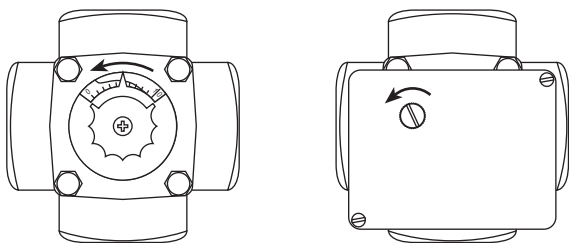


6) Put the replacement mixing valve insert into the valve in the same orientation (ie. closed).

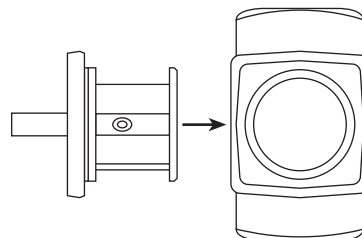


3) Remove the mixing valve handle by unscrewing the center screw or the mixing valve motor by removing the bottom two bolts.

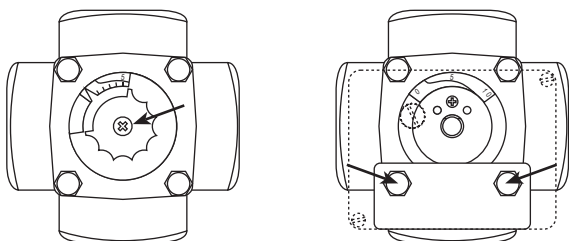


7) Screw in the four bolts back in (or top two bolts in the case of the mixing valve motor).

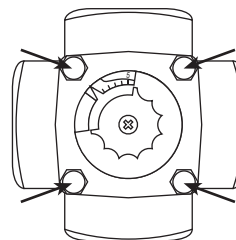

4) Remove the four bolts (or remaining two bolts in the case of the mixing valve motor).

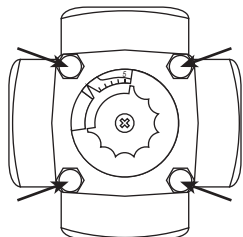

8) Reattach the handle or mixing valve motor.

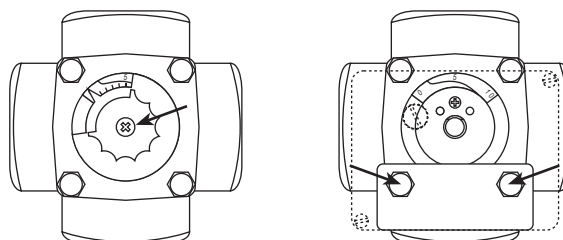

9) If there is a mixing valve motor, reconnect the neutral wire at the control.

5) Remove the mixing valve insert.

